

RUBRIG rubber tiles maintenance guidelines

RUBRIG rubber tiles are super easy to keep clean and maintain. You will be amazed how good your RUBRIG surfaces will look for years to come with the proper rubber floor maintenance program and just a little planning.

Regular cleaning of RUBRIG rubber flooring tile typically includes cleaning with a soft-bristled broom or vacuuming any loose dust, dirt, or debris from the rubber surface when necessary. Occasional damp mopping of the rubber tiles with a mild soap and water mixture will promote a long useful life as well as attractive appearance of RUBRIG surfaces. It is important not to get the flooring too wet as this may have an adverse effect on the adhesive system employed.

Atmospheric exposure of rubber flooring tiles may result in the natural appearance of moss and algae. To solve this problem it is recommended to use a high pressure water cleaner until 200bar without chemical additives! Attention! The water pressure must not be too high. The distance of water jet to the surface area should be minimum 30cm and the water temperature should not be higher than 80°C. This type of cleaning is recommended to be done once a year.

For heavily soiled surfaces and adherent impurities, you can use water and a scrubber, but you should use only a mild pad or a soft nylon brush. It is possible to use dilution soapsuds. Do not let the cleaning solution stay on the rubber floor for long periods. After cleaning, it is recommended to use water as a rinser.

While removing snow in winter be attentive not to damage the surface by sharp-edged implements or overweight machinery. The application of commercial, allowed de-icing salt won't hurt the coating. Attention! Don't use solvent based cleansing material. It can damage the product surface.

Due to their extreme durability and ease of maintenance RUBRIG rubber tiles are a universal solution for any application!